



Universal Jerry Can Holder Installation Instructions

Part #: RT26088, RT26093, and RT26094

Kit Components:

RT26088

- (1) Jerry Can Base
- (1) Jerry Can Top Strap

RT26093

- (1) Jerry Can Base
- (1) Jerry Can Top Strap
- (1) Red Jerry Can

RT26094

- (1) Jerry Can Base
- (1) Jerry Can Top Strap
- (1) Olive Drab Jerry Can



Read all instructions carefully prior to starting installation.

This is a Universal Jerry Bracket. It can be mounted in a variety of places such as bumpers, trailers, truck beds, roof racks, etc. Due to this, no hardware is included.

1. Place the **Jerry Can Base** in the desired mounting location (See **Figure A**) and use the holes in the **Base** as a guide to mark the bolt locations on the vehicle (See **Figure B**).

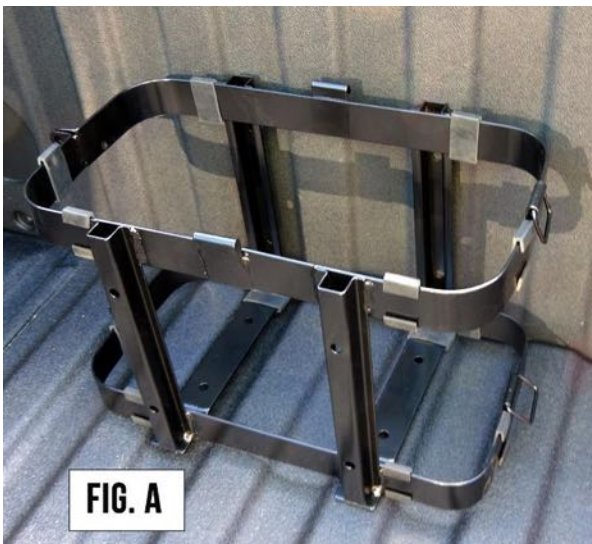


FIG. A



FIG. B

2. Mount the **Jerry Can Base** to the vehicle using the desired hardware. Depending on the type of hardware you plan to use (self-tapping bolts, bolts with nuts, etc.) various sized holes may need to be drilled. You can purchase hardware at any home improvement store.
3. Insert the **Jerry Can** into the **Base**. Secure it by installing the **Jerry Can Top Strap** over the can by first connecting the hook side to the buckle (See **Figure C**). The **Top Strap** tab lock hole should line up with the lock tab hole in the **Base** (See **Figure D**).
4. Secure the **Jerry Can Top Strap** to the **Jerry Can Base** with a padlock (not Included).



The installation is now complete.

While every attempt is made to ensure that the information contained in these instructions is correct, no liability can be accepted by the authors for loss, damage, or injury caused by any errors in, or omissions from the information given. All service should be performed by qualified mechanics. Crown Automotive Sales Co. Inc. cannot be held responsible for any mechanical work performed. Standard and accepted safety precautions should be used in every procedure.