



Replacement Soft Top Installation Instructions 1988-1995 YJ Wrangler

Part #: RT10015, RT10015T, & RT10037

Kit Components:

- Replacement Top
- (2) Side Windows
- (1) Rear Window
- (2) Upper Door Skins *(if applicable)*



-Read all instructions carefully prior to starting installation.

-We recommend installing this top in temperatures 70F (21C) and above. This will make installation easier and reduce the risk of damaging the top. Laying all of the pieces of the top in the sun is also suggested to ease installation.

-Do not over-stress the zippers or straps. Failure to comply may damage the top or windows.

-Will Fit 1987 models if a 1988-1995 Door Channel is used. Factory soft upper door skins attached to the lower door with snaps in 1987 only. 1988-1995 use a belt rail design.

Replacement Top Install

1. Ensure that all parts are accounted for.
2. Remove the old soft top, windows, and tailgate bar. The bow assembly will remain on the vehicle. Save any hardware removed as it will be reused to install the replacement top. Leave the bow assembly in the upright position.
3. With the Side Windows removed, drape the Replacement Top over the bow assembly with the plastic strip sewn into the top facing the front of the vehicle.
4. Pull the pin on the spreader bars (the bars that connect the center and rear bow assembly) and slightly collapse the bow assembly.
5. Snap the Replacement Top to the center and rear bow assembly.
6. Insert the sewn-in plastic strip at the front of the top into the windshield channel. Be sure the material is centered to the windshield frame.
7. Clip the rear corners of the Replacement Top into the left and right quarter panel belt rails.
8. Pull back the rear bow assembly until it snaps into the notch in the inside of the belt rail.
9. Push the spreader bars back up and re-insert the pins.


10. Install the Side Windows by starting the upper zippers 4-6". Then zip the vertical zippers 4-6". Tuck the sewn in plastic strips at the front of the Side Windows into the door surrounds. Clip the bottom of the windows into the belt rail. Fully close the zippers.
11. Install the Rear Window by starting the zipper 4-6" along top of the window only.
12. Slide the tailgate bar (*Sold Separately P/N TN27015*) into the bottom of the Rear Window and slide it into the tailgate bar retainers.
13. Fully zip the Rear Window. Tuck the plastic strips on either side of the Rear Window into the tailgate bar retainers. Clip the two flaps into the belt rail.
14. Fasten the snaps above the door opening.
15. Make any adjustments necessary to ensure the top is centered and fits properly. Creases in the top fabric of windows will fade away once the top is installed.

Door Skin Install

1. Remove the door skin from the frame. If an OE door skin is being removed it will need to be cut off.
2. Un-zip the window on replacement skin to help ease installation.
3. Install the Upper Door Skins onto the frame in the order shown to the right.

NOTE: It may be necessary to roll the corner of the door skin onto the frame with a pry tool. Do not over-stress the fabric of the skin. Damage may occur.

4. Once the skin is installed, make any adjustment necessary so the skin fits properly. Affix the hook and loop fasteners. Fully zip the window.
5. Reinstall the upper door on the vehicle. Make any adjustments necessary for an ideal fitment.

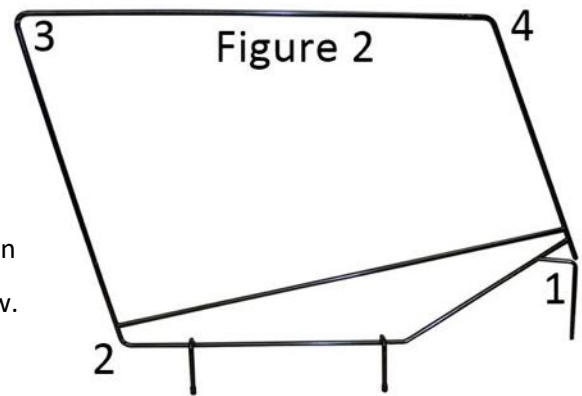

NOTE: Small adjustments to the top may be necessary once the top warms up and any creases are smoothed out.

NOTE: Over the years many different companies have produced upper door frames. While they are similar, the exact dimensions will vary which may require additional adjustments in installation.