



JL LED Tail Light Set

Installation Instructions

P/N: RT28114

Parts List

- 1 – Left LED Tail Light
- 1 – Right LED Tail Light
- 6 – Screws
- 2 – Clips

Installation





1. Disconnect the negative battery cable.
2. Remove the access cover on the inside of the vehicle using a flat pry tool.

NOTE: The left access cover varies in size. To remove the small cover (See **Figure 1**) simply pry up on the tab. To remove the larger access cover (See **Figure 2**) pry up on the rear of the access cover as seen in **Figure 2** to release the 2 clips, then lift the access cover up to release the tabs.



3. Remove the plastic spring bolt using a 10mm socket or T40 Torx® bit and ratchet.
4. Remove the tail light from the vehicle by carefully pulling straight back.
5. Release the red slide lock tab on the connector (See **Figure 3**, Orange Arrow), then unplug the connector by depressing the black tab and pulling the body side of the connector away from the tail light. Remove the clip holding the body side of the connector to the tail light bracket (See **Figure 3**, Red Arrow).
6. Install one of the included **Clips** onto the **LED Tail Light**. See **Figure 4**, Red Arrow).
7. Remove the plastic tail light bracket from the OEM tail light using a Phillips screwdriver and install onto the **LED Tail Light** using the 3 of the included **Screws**.

8. Install the clip on the body side of the connector onto the tail light bracket (See **Figure 3**, Red Arrow). Plug in the tail light connector and engage the red lock tab (See **Figure 3**, Orange Arrow).

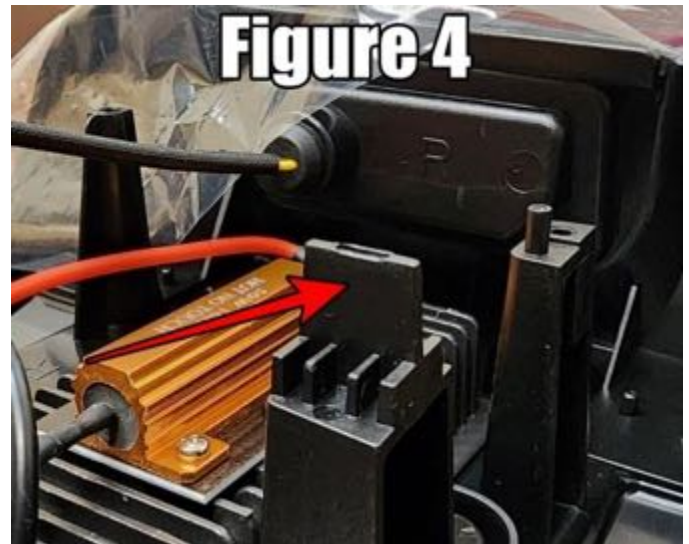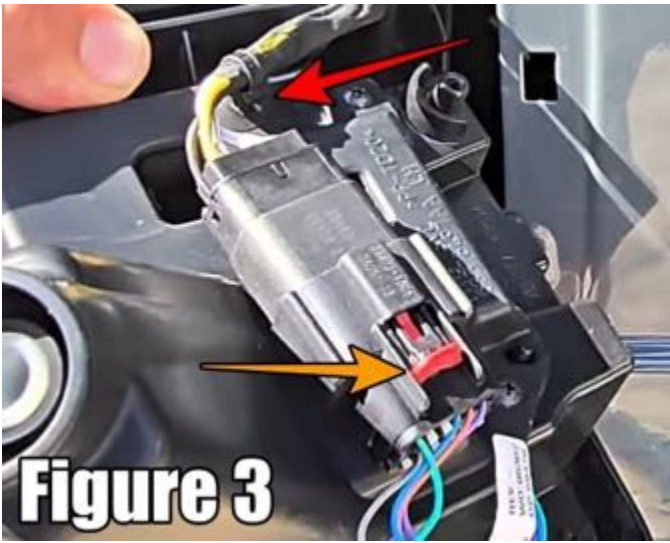

9. Install the **LED Tail Light** onto the vehicle ensuring all tabs are properly aligned. Secure using the plastic spring bolt. Install the access cover.
10. Repeat on the opposite side.
11. Connect the negative battery cable. Ensure full functionality of all lights.

While every attempt is made to ensure that the information contained in these instructions is correct, no liability can be accepted by the authors for loss, damage, or injury caused by any errors in, or omissions from the information given. All service should be performed by qualified mechanics. Crown Automotive Sales Co., Inc. cannot be held responsible for any mechanical work performed. Standard and accepted safety precautions should be used in every procedure.